


TGS1600MD Parts Breakdown

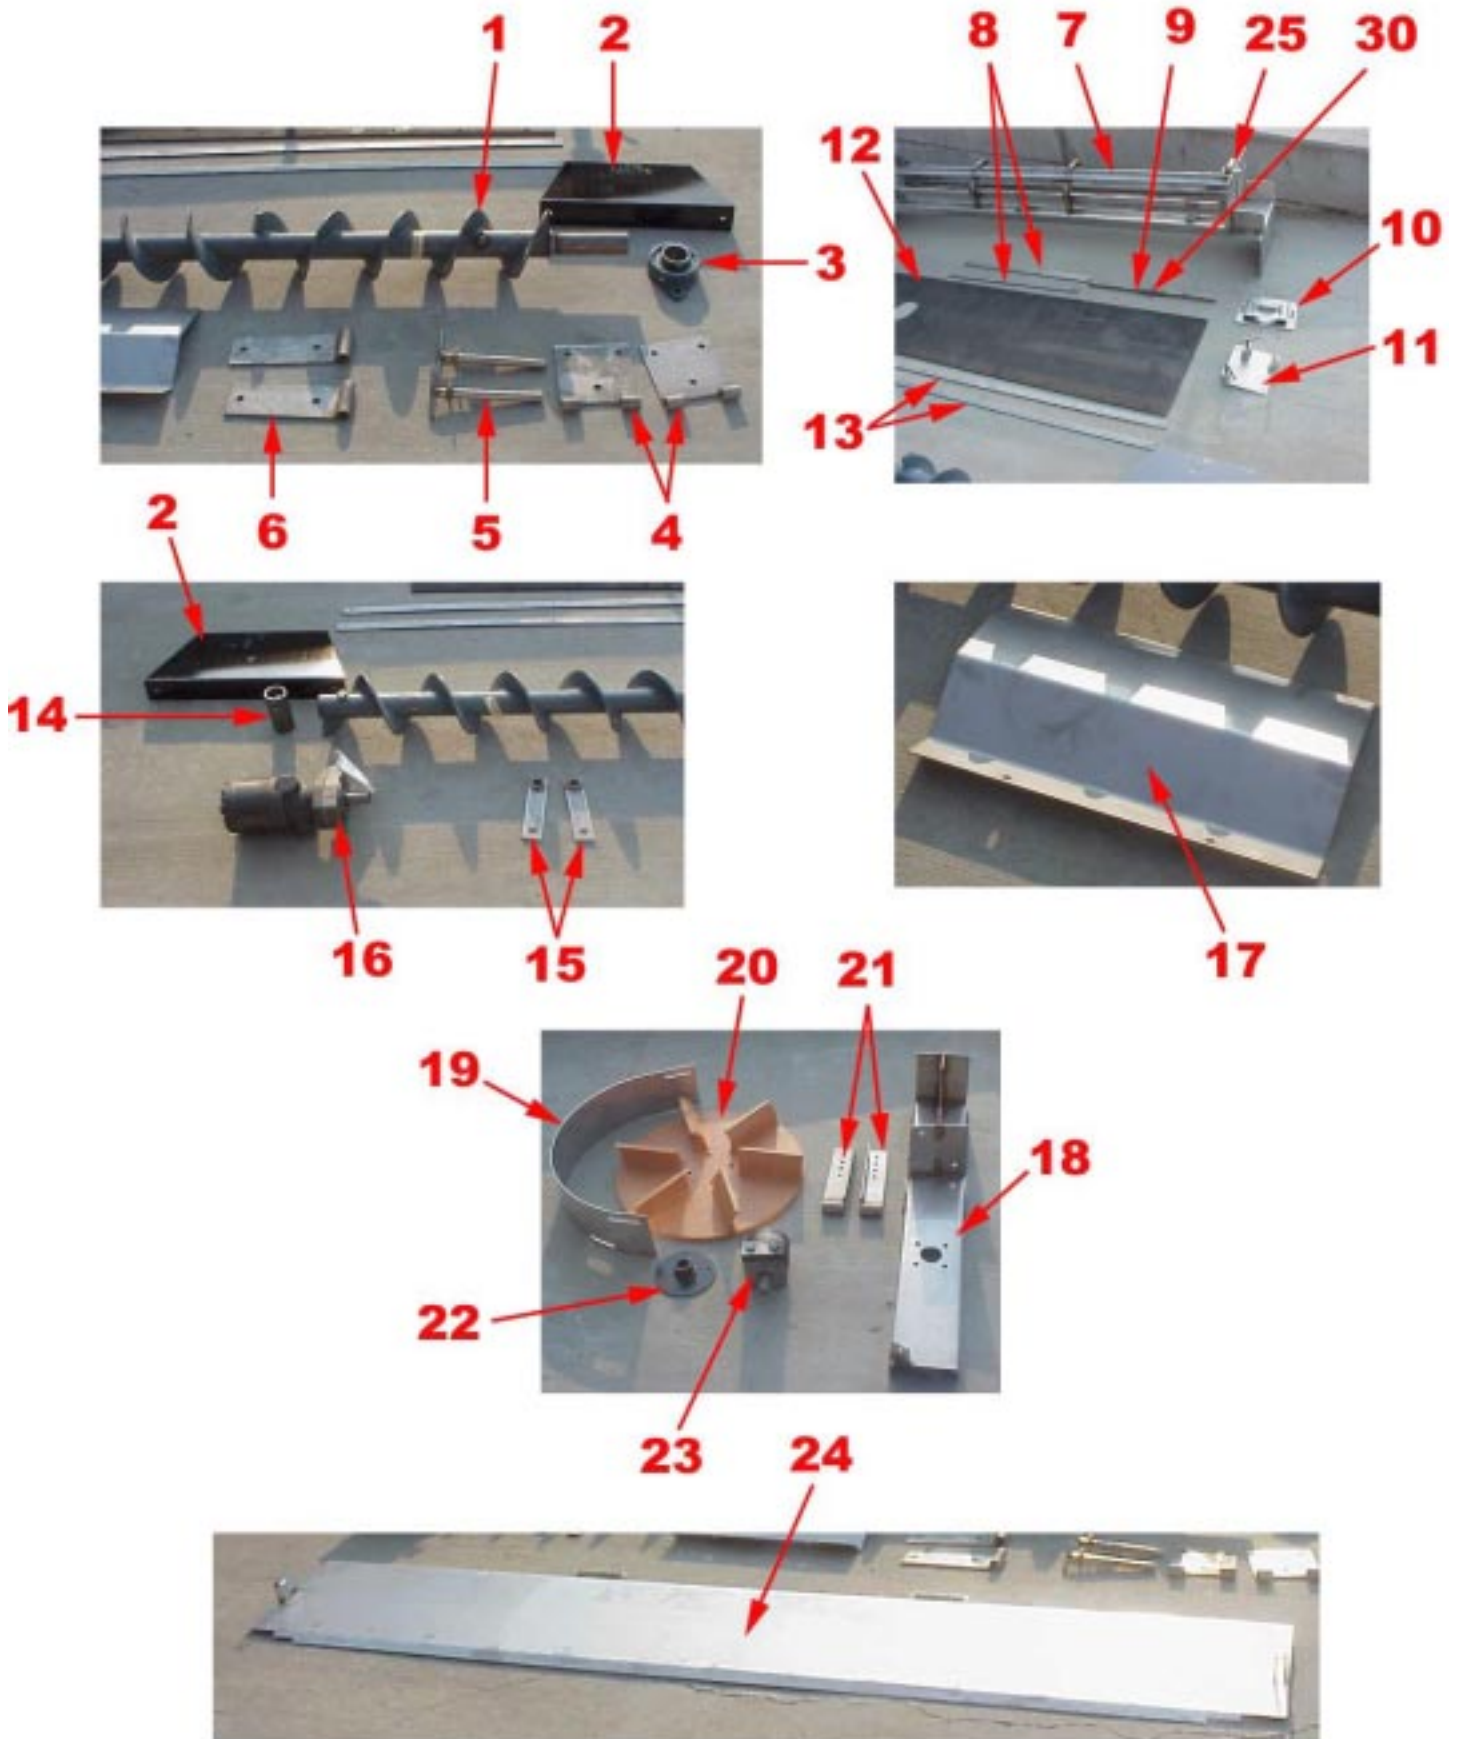

TGS 1600MD DETAILED PARTS LISTING

ITEM #	PART NUMBER	DESCRIPTION	No. Requ'd
1	TGS-1528B	Auger	1
NS	TGS.1563	Shaft Adaptor External Sensor (08/03)	
NS	TGS.1563G	Sensor Guard	
NS	TGS.46436	Sensor - Shaft Drive Type (10/03)	
2	TGS-1560	Deflector Plate	2
3	TGS-1511B	Flange Bearing	1
4	TGS-1561	Truck Hinge	2
5	TGS-1562	Hanger Pin	2
6	TGS-1620	Spreader Hinge	2
7	TGS-1501A	Main Frame	1
8	TGS-1554	Support Bracket	2
9	TGS-1521	Hinge Pin for spinner	1
10	TGS-1510A	Bearing Plate, 2"	1
11	TGS-1508A	Latch Plate, LH	1
	TGS-1508B	Latch Plate, RH	
12	TGS-1502A	Rubber Boot	1
13	TGS-1503A	Backing Strip for rubber boot	2
14	TGS-1517	Shaft Adaptor Coupling	1
15	TGS-1507	Door Hinge (lid)	2
16	TGS-1513S	Auger Motor, with sensor/Parker	1
	TGS-1513	Auger Motor, without sensor	1
	UU-455069	Pickup sensor for Parker motor	1
17	TGS-1509	Deflector Plate	1
18	TGS-1519	Spinner Frame	1
19	TGS-1527	Spinner Shield	2
20	TGS-1526	Spinner	1
21	TGS-1520	Spinner Hanger	1
22	TGS-1525	Hub	1
23	TGS-1524.A	Spinner Motor	1
24	TGS-1506A	Lid	1
25	TGS-1504A	Hinge Assembly, main frame	1
26	TGS-1512A	Motor Plate (not shown)	1
27	TGS-1518	Quick Disconnect, female (not shown)	2
28	TGS-1516	Quick Disconnect, male (not shown)	1
29	TGS-1522	Retainer Pin, spinner (not shown)	1
30	TGS-1523	Lock Sleeve Pin (not shown)	
31	TGS-1623	Lock Sleet Bolt	
	TGS-464211210.51	Sensor Cable	